



Sezionatore 3P LTS/K-000

LTS/K-000 3P fuse disconnecter



Sezionatore 3P LTS/K-00

LTS/K-00 3P fuse disconnecter

SEZIONATORI SERIE LTS/K 690V AC

SERIES LTS/K 690V AC FUSE SWITCH DISCONNECTORS

grandezza	codice IW	tipo	n. poli	I_n (A)	V_n (V)	conf.
<i>size</i>	<i>IW code</i>	<i>type</i>	<i>poles</i>	<i>I_n (A)</i>	<i>V_n (V)</i>	<i>pack.</i>
000	3100000	LTS/K-000	3P	125A	690V	1
	3100101	LTS/K-00	1P	160A	690V	1
00	3100102	LTS/K-00X2	2P	160A	690V	1
	3100210	LTS/K-00X3	3P	160A	690V	1
	3100104	LTS/K-00X4	4P	160A	690V	1
1	3100111	LTS/K-1	1P	250A	690V	1
	3100112	LTS/K-1X2	2P	250A	690V	1
	3100211	LTS/K-1X3	3P	250A	690V	1
	3100114	LTS/K-1X4	4P	250A	690V	1
2	3100212	LTS/K-2X3	3P	400A	690V	1
3	3100131	LTS/K-3	1P	630A	690V	1
	3100132	LTS/K-3X2	2P	630A	690V	1
	3100213	LTS/K-3X3	3P	630A	690V	1
	3100134	LTS/K-3X4	4P	630A	690V	1